

HowTO

Clarke® BEXT 100H Extractor Operation and Safety

Safety Practices:

Machine can cause an explosion when operated near flammable material and vapors. Do not use this machine with or near fuels, grain dust, solvents, thinners or other flammable materials.

Always use a 3- wire electrical system connected to the electrical ground.

Keep hands, feet, and loose clothing away from all moving parts on the machine.

Remove the electrical plug from the electrical outlet before doing any repairs or maintenance to this machine.

Never leave the machine unattended while it is connected to a power source.

It is recommended that you use liquid cleaning chemicals. Powder can damage the machine.

Do not use water that is hotter than 120°F (40° C).

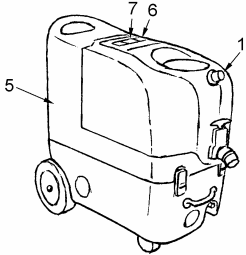
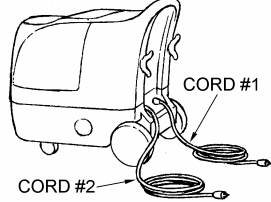
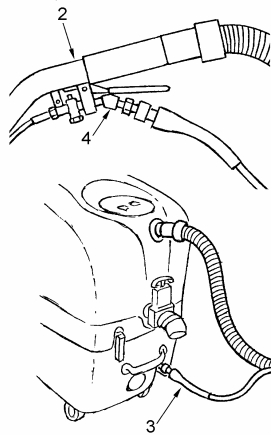
www.clarkeus.com/rental

More on reverse....

Application: Easily extract large or confined carpeted areas such as stairs or tight office spaces. Use optional hand tool when cleaning partition, fabrics and upholstery.

Set-up and operation

Follow the steps below to successfully use extractor:

Step	Action	
1	<p>To set-up machine:</p> <p>a.) Connect vacuum hose to the hose connector on the extractor (1) and to the end of the vacuum tube on the floor tool (2).</p> <p>b.) Connect the solution hose (3) to the extractor and the floor tool (4).</p> <p>c.) Put clean hot water into the solution tank (5).</p> <p>d.) Add a cleaning chemical to the hot water (for amount see container).</p> <p>e.) Plug in cord #1 (identified by red "H" on the end).</p> <p>f.) Turn pump on (6) and set the switch to "Upholstery" setting. Run till pump is fully primed and then turn off pump.</p> <p>g.) Remove the priming hose and attach the cleaning hose & tool.</p> <p>h.) Turn on the pump and spray through the cleaning tool for a few seconds to fill line with solution.</p> <p>i.) Plug in cord #2. The "locator light" (7) will light up when the cords are plugged into separate circuits.</p> <p>j.) Turn "heat" switch on and wait 2 minutes to reach operating temperature.</p> <p>k.) Begin cleaning (see steps 2 and 3).</p> <p>NOTE: The "mode" light will turn on when the heat exchanger is actively heating.</p> <p>NOTE: If the "locator" light does not light when cord #2 is plugged in, try another outlet until it does come on.</p>	  
	<p>Please note that the locator light is very dim.</p>	

BEXT 100 H Extractor

WARNING: If foam liquid comes out, stop extracting immediately. Allow vacuum to run until exhaust is dry.

WARNING: We recommend that you use liquid cleaning chemicals. Powder can damage machine and void your warranty.

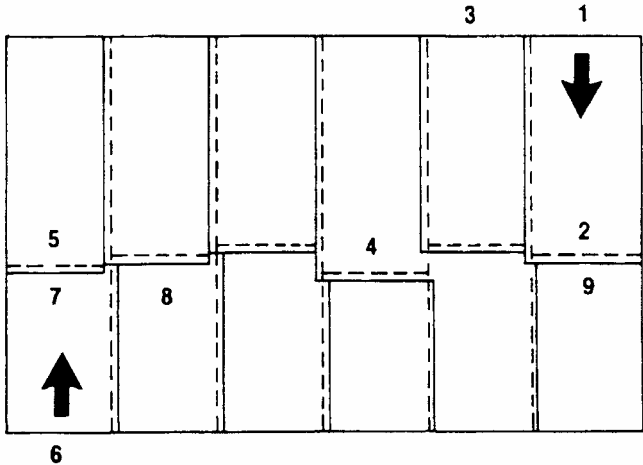
WARNING: DO NOT use water that is hotter than 120°F (40°C).

Questions or Problems?

Contact Clarke Technical Service at 800-356-7274.

Need more information?

The instructions on this sheet are abbreviated instructions only and are provided solely as a customer service. They are not meant to replace the tool's operation manual. If you are unsure of the tool's safe and proper operation, please request an operator's manual from one of our sales associates.

Step	Action
2	<p>How to operate the machine to clean carpet:</p> <ul style="list-style-type: none"> a.) Start pump for the solution and the motor for the vacuum. b.) Begin at right hand corner of the carpet. c.) Hold floor tool at angle to get best vacuum seal between tool and carpet. d.) Apply pressure to the lever for solution release. e.) Pull tool toward you at a slow steady speed. f.) Release lever before you stop moving backward. g.) Push tool away over the same area, while moving the tool to next position. h.) Repeat till all area is cleaned. i.) To remove more liquid from carpet, make passes over area already cleaned, but do not apply pressure to the solution lever.
3	<p>How to operate the machine to clean a large area of carpet:</p> <ul style="list-style-type: none"> a.) Begin at the right hand corner of the room. b.) Make a pass halfway along the edge of the carpet. c.) Pull the tool backward at a steady speed. d.) Move to the edge of the carpet and make another pass next to the first pass. e.) As you make more passes, repeat one inch of the area already cleaned. f.) Make more passes until half the carpet is cleaned. g.) Move the right hand corner of the part of the carpet not yet cleaned. h.) Repeat b through e until the room is cleaned. 
4	<p>Do not walk on freshly cleaned carpet for at least 4 hours or until dry to touch.</p> <p>Do not allow children or pets to crawl or walk around on damp carpet.</p> <p>Vacuum right after the carpet is dry.</p>