

# Hejny Rentals, Inc.

Contractor, Lawn & Garden, and Party Equipment Rentals  
1829 White Bear Ave. - Maplewood, MN 55109  
Phone: 651-770-3841 – Fax: 651-770-1725  
[www.hejnyrental.com](http://www.hejnyrental.com)

## MORRISON PB16 POWER BUGGY

### WARNINGS!

1. Only operate Buggy at a slow speed until you become familiar with the operation of the Speed Control and Brake!!
2. Wear all the protective clothing and personal safety devices issued to you or called for by the job conditions!
3. Do not overload the buggy (max load for PB16 is 2500 lbs.)
4. Never modify or remove any part of the equipment.
5. Keep others away from your operation.
6. ALWAYS set parking brake before dismounting. If Buggy is to be unattended shut off engine.
7. Make certain that the step is either down or securely latched in the uprights position. If the Buggy is to be used in rough terrain place the Step Plate in its upright position and walk behind the Buggy.
8. Inspect the surface over which you will travel. Watch for anything that might make you lose control or cause the Buggy to tip over. Clear away any debris that might puncture a tire.
9. Check clearances of doorways, overheads, and trailers.
10. NEVER mount a moving Buggy.
11. Always have three out of four arms and legs in contact with the Buggy. Never use control levers as a hand-hold when climbing your hands before mounting.
12. Keep all parts of your body in the operator's position while operating the Buggy.
13. Never attempt to work the controls except from the operator's position.
14. AVOID sudden stops, turns, starts, or changes in direction.
15. DO NOT carry any tools, lunch buckets, chains or hooks. Loose items on the Buggy could cause an accident.
16. DO NOT touch, lean on or reach through the dump mechanism or permit others to do so. Hands Off! Never climb on the Buggy or dump mechanism.
17. Stay ALERT!
18. Never allow an untrained person to operate your Buggy. This is a ONE PERSON Buggy. Never permit riders!
19. Never drive a Buggy up to someone standing in front of a fixed object.
20. Never stand or allow anyone else to stand in front of, alongside of or where you intend to unload.
21. Keep others away from articulation joints, lift mechanisms, cylinders, etc.
22. Plan to load, unload, and turn on flat level ground.
23. **AVOID SHARP TURNS AT HIGH SPEED!**

### STARTING

1. Engage parking brake.
2. Turn engine operating speed control to idle.
3. Make sure speed control linkage operates freely.
4. Make sure fuel valve is turned on.
5. Set choke if starting cold.
6. Pull rope.
7. Set choke to off and allow engine to warm up before applying loads.

### CLEAN UP

1. Keep work surfaces and engine compartments clean. \$50 cleaning charge if returned unclean.

### SHUTDOWN

1. Come to a full stop.
2. Set parking brake.
3. Idle engine for gradual cooling.
4. Shut off engine.
5. Cycle hydraulic controls to eliminate residual pressure.
6. Block wheels.

**Need It. Rent It!**