

# Hejny Rentals, Inc.

Contractor, Lawn & Garden, and Party Equipment Rentals  
1829 White Bear Ave. - Maplewood, MN 55109  
**Phone: 651-770-3841 – Fax: 651-770-1725**  
**[www.hejnyrental.com](http://www.hejnyrental.com)**

## COTTON CANDY MACHINE

### OPERATION

1. Plug in the floss machine. Floss machine requires 1080 watts.
2. Without motor running, fill floss head about 90% full with sugar. Do not over fill! Whenever you add sugar to the floss head, always fill it about 90% full. This is necessary to obtain a balanced condition in the floss head or excessive vibration will occur. Never add sugar when motor is running! After adding floss sugar manually rotate head to balance.
3. Flip main switch and heat switch to on position.
4. Turn heat control knob in the clockwise position to maximum setting. This
5. Setting will produce the fastest possible warm up.
6. The machine should begin to make floss in a few seconds. When the unit gets up to heat, it will probably start to smoke. Just turn the heat control knob in the counter clockwise direction to eliminate the smoking. Never operate the equipment for a prolonged period of time with the heat control in a position that causes the sugar to smoke. This will result in excessive carbonization of the heat element. If you smell burning sugar or smoke, reduce the heat.
7. Once you find the ideal setting for the heat control, you should be able to
8. Operate near this position each time.

### MAKING FLOSS

1. Using a damp cloth, moisten the inside of the floss pan. This will cause the floss to adhere to the sides of the pan.
2. Plug in controls and operate machine as described in above directions.
3. Pay attention to the direction of the floss as it is spun out of the head. It should be thrown against and adhere to the sides of the floss pan. Attached to the top plate of the spinner head are two floaters. These give additional air current for floss control. By twisting the leading edge of the floaters down, you get more lift and the floss will go upward. With the leading edge up, the floss will go down. A little practice should give you good control in any climate condition.
4. To pick up floss: once you practice awhile, anyone can be an expert at rolling the web of cotton candy on the cone. Wind the floss onto the cone. Do not roll floss onto the cone while it is inside the pan. This will pack the
5. Floss onto the cone requiring more floss per cone. If you experience difficulty in getting floss to stick to the cone, it will be helpful to pass the cone over a damp sponge. If the cones stick together - do not pull, twist them apart.
6. When stopping operation for the day or any prolonged period, it is good to run all the sugar out of the floss head. When empty, turn the heat to the highest position for approximately one minute to remove carbonization from the heating elements. A damp cloth is sufficient to wipe off the floss head after using, but be sure to unplug the main electrical supply cord before doing this. Make sure all parts are dry before resuming operation.

**Need It. Rent It!**