

HEJNY Rental

Contractor, Lawn & Garden, and Party Equipment Rentals

1829 White Bear Ave. - Maplewood, MN 55109

Phone: 651-770-3841 – Fax: 651-770-1725

www.hejnyrental.com

10X10 and 10x20 Freestanding Canopy

WARNING

NOT COMPLYING WITH THESE WARNINGS WILL VOID YOUR CARAVAN® WARRANTY!

- DO NOT set-up or leave your Caravan® assembled in hail, sleet, snow, lightning, strong winds or any harsh weather conditions.
- DO NOT allow water of any kind to accumulate on the canopy top.
- Use Tie-downs, Stakes or Weight Bags to secure your Caravan® in windy conditions. Commercial Stake Kits and Weight Bags can be purchased as accessories directly from Caravan®.
- Never set-up your Caravan® over barbeque or near open flame. Although the canopy top is fire retardant, serious injury or damage to canopy can still occur.
- Always follow directions when setting-up your Caravan®. Be aware of hands and fingers when expanding or collapsing frame.
- It is recommended to remove canopy top from frame after take-down. Storing top on frame may result in fabric tears or other damage requiring repair or re-purchase.
- Never clean the canopy top in a washing machine - serious damage will result. If cleaning is required, while set-up on the frame, use a light detergent on a cloth and gently clean top by hand, then rinse off with a garden hose.
- DO NOT use detergent or hand cleaner if top has custom silk-screened graphics.
- Allow top to dry completely before storing.
- Keep your canopy off of steep slopes and inclines
- DO NOT use your Caravan® as a permanent shelter. It is designed for temporary use only!
- Never leave your Caravan® unattended.

SETUP

- 1.) Stand the Caravan® Canopy frame upright in the center desired set-up location.
- 2.) Gently pull the outer frame legs partially extended with a second person assisting.
- 3.) Place the canopy top over the partially open frame.
- 4.) Align the canopy top with the four (4) corners of the frame and attach the canopy hook and loop strip to each frame corner securely.
- 5.) Lift frame into position by expanding the truss bars until the frame is fully extended. Be careful not pinch fingers or hands as you lift and step backwards slowly.
- 6.) Now that the frame is fully extended, lock the top bracket sliders into place at each corner by holding the frame with one hand and pulling the slider in place until it locks.
- 7.) Adjust the frame legs to your desired height by lifting up each leg and slowly pulling out the inner leg into place until the leg pops into place. Repeat this process for each desired height adjustment by using the pull pin on each leg. Placing one foot on each corner footpad and slowly extending each leg into place can also extend the frame legs.
- 8.) Attach U-Clips to each side of the canopy frame to secure canopy top. Your Caravan® Canopy Aluma is now complete!

TAKE DOWN

- 1.) Detach U-Clips from each side of the canopy frame.
- 2.) Release each pull pin on each leg and shorten the frame to its original height prior to extending the legs during set-up.
- 3.) Disengage locking button at each corner of the frame and pull the slider down slowly until the button is completely free of the slider.
- 4.) Hold the middle frame section with a second person assisting on two sides of the frame.
- 5.) Walk forward slowly allowing for the frame to fold inward and close. Be careful not pinch fingers or hands as you close the frame.
- 6.) Completely fold the frame securely with or without the canopy attached.
- 7.) Place the frame into the unzipped storage bag by sliding it down into the bag slowly until canopy fits comfortably. Zip the storage bag completely shut.
- 8.) Wheel your Caravan® Canopy Aluma to your desired storage area.

Need It. Rent It!