

Hejny Rentals, Inc.

Contractor, Lawn & Garden, and Party Equipment Rentals
1829 White Bear Ave. - Maplewood, MN 55109
Phone: 651-770-3841 – Fax: 651-770-1725
www.hejnyrental.com

Passport P-10 Personal Sound System

Includes: Main Unit, Shoulder Strap, AC to DC Power Adapter / Battery Charger, AC Cord, Rechargeable Battery, and Handheld Microphone w/ Cord.

Operation

Using the microphone

- Plug the microphone into the XLR (3 pin) connector of the coiled microphone cable.
- Plug the 1/4" end of the coiled microphone cable into the 1/4" Input Jack on the P10 (#3 in drawing).
- Turn the Volume Control (#4) clockwise to turn on the P10, and adjust to desired volume.

Connecting another audio source to the P10

- The 1/8" Auxiliary input jack (#7) is available to connect a CD or Cassette player to the P10.
- Connect the device's audio output to the 1/8" Auxiliary Input on the P10.
- Turn the Volume Control (#4) clockwise to turn on the P10, and adjust to desired volume.

Charging the Battery

Very Important! - Before you use your P10, you must charge the battery for at least four hours (or until the Battery Charge Indicator indicates the battery is fully charged). A single four hour charge will power the P10 for up to eight hours of continuous use.

The P10 has an auto turn-off protection circuit. When the battery charge is weak, the unit will automatically turn off to prevent damaging the battery. If this happens, turn off the unit and recharge the battery.

AC to DC power adapter

A power adapter is supplied with your P10. This adapter is used to recharge the battery. **It is not designed to power the P10 from an AC source.** Make sure the P10 is turned off when recharging the battery.

Charging the Battery

Plug the barrel end of the cord into the DC power input jack (#) and plug the AC end into your AC power source.

Charging will begin immediately and the Battery Charge Indicator will show a blinking green light.

Battery Charge Indicator.

- Red light indicates battery is low and needs charging.
- Green, blinking indicates charging in progress.
- Solid green indicates battery is fully charged.

If the indicator does not immediately start to blink green, it may be due to excessive power drain of the battery. This is normal. The indicator should begin to blink after 10 to 15 minutes. If the battery charge indicator fails to light, it may be due to a faulty battery.

Replacing, or using a second Battery

With proper care and charging, it is unlikely that it will be necessary to replace the battery in the P10. If you plan on using the P10 for extended periods of time, you may want to purchase a second battery. The battery is a standard 12 volt 2.7 amp gel cell and is available from Fender directly, or from Authorized Fender Audio dealers. (Part number 005-7535-000).

Need It. Rent It!