





Set up and Operation



System Set-Up:

Set system on a dry, level surface.

1. Obtain appropriate protective equipment.
2. Make sure there is nothing left in the hopper or base from transporting. Unexpected objects in the hopper can cause damage to the agitator or airlock upon start-up.
3. Ensure your system is located on a stable flat surface to maintain even loading and blowing. Note: Please ensure that the hopper opening is above the Fiber Force's filter section as this is the appropriate orientation for the hopper to allow the system to operate. The hopper's key slot will match the bases 'key' as intended with this orientation; allowing the green and red lights to come on and the system to be operational.
4. Using the supplied 12 gauge heavy duty power cord, connect the female twist lock to the machine's power receptacle, and the male end to a 115V - 15amp circuit (connecting to a 20amp circuit is fine, yet not required).
5. Attach hose to machine outlet by sliding the female end of the quick hose connect over the machine's male outlet until the round button clicks into the hole.

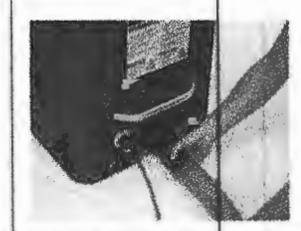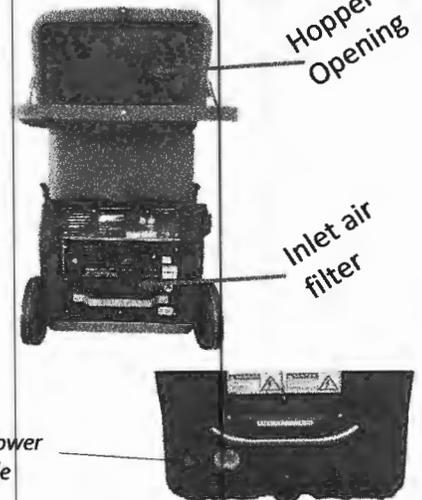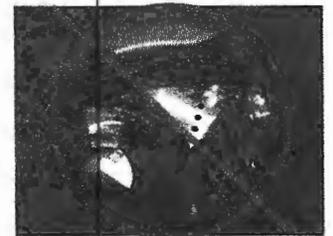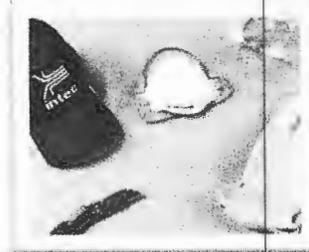

6. Open slide gate & place pin in desired opening.
Note: The slide gate is optional and not required in all machines. If your system does not have a slide gate, proceed to System Operation.



System Operation:

1. Energize System

- a. Place the main circuit breaker in the ON position.
- b. The START button and the STOP button should be illuminated, green & red, indicating the system is ready to start.

Note: Ensure that the agitator circuit breaker is not tripped. It should be pushed in as far as possible.



Main
Circuit
Breaker

2. System Control – From either Operator Panel or Wireless Remote

a. Operator Panel

- i. Press the green *START* button to turn the system on.

The blower will start. After approximately 3-5 seconds the agitator will also start.

Note: This system is designed for the blower motor to start first as this provides an audible (i.e. sound warning) that the system's agitators are about to start.

- ii. Press the red *STOP* button to turn the system off. Both the agitator and blower will stop.

b. Wireless Remote

- i. Press the green button to turn the system on.

The blower will start. After approximately 3-5 seconds the agitator will also start.


Note: This system is designed for the blower motor to start first as this provides an audible (i.e. sound warning) that the system's agitators are about to start.

- ii. Press the red button to turn the system off. Both the agitator and blower will stop.



3. Load Insulation

Cellulose: Place full bag on loading platform. Remove packaging and place full bale of cellulose into hopper. Note: when using the small hopper configuration, you will need to place a fraction of the bag into the hopper to allow product to fit into hopper entrance.

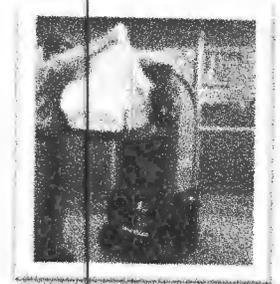

Fiberglass:



Cut bag in half



Bend bag to break



Place half bag on hopper with open end facing a side. Then cut the plastic side facing the hopper and allow the product to expand into the hopper. Caution – do not force product into the hopper. The natural expansion of product into the hopper is all that is required to place product into hopper.