

Hejny Rentals, Inc.

Contractor, Lawn & Garden, and Party Equipment Rentals
1829 White Bear Ave. - Maplewood, MN 55109
Phone: 651-770-3841 – Fax: 651-770-1725
www.hejnyrental.com

PROPANE HEATER WITH ELECTRIC FAN

SAFETY

DANGER! CARBON MONOXIDE POISONING MAY LEAD TO DEATH! EARLY SIGNS OF CARBON MONOXIDE POISONING RESEMBLE THE FLU, WITH HEADACHES, DIZZINESS, AND/OR NAUSEA. IF YOU HAVE THESE SIGNS, THE HEATER MAY NOT BE WORKING PROPERLY. GET FRESH AIR AT ONCE!!

USE ONLY IN WELL VENTED AREAS. PROVIDE AT LEAST ONE SQUARE FOOT OPENING OF FRESH, OUTSIDE AIR WHILE RUNNING HEATER.

DO NOT USE HEATER IN OCCUPIED DWELLINGS. THIS HEATER IS PRIMARILY INTENDED FOR TEMPORARY HEATING OF BUILDINGS UNDER CONSTRUCTION, ALTERATION, OR REPAIR.

NEVER USE HEATER WHERE GASOLINE, PAINT THINNER, OR HIGHLY FLAMMABLE VAPORS ARE PRESENT.

DO NOT USE HEATER BELOW GROUND LEVEL. PROPANE GAS IS HEAVIER THAN AIR. IF A LEAK OCCURS, PROPANE GAS WILL SINK TO THE LOWEST POSSIBLE LEVEL.

PLUG HEATER INTO A PROPERLY GROUNDED THREE-PRONG RECEPTACLE.

USE ONLY A THREE-PRONG, GROUNDED EXTENSION CORD.

KEEP HEATER AT LEAST 6' FROM PROPANE TANK(S). DO NOT POINT HEATER AT PROPANE TANK(S) WITHIN 20'

ALLOW FOR 2' OF CLEARANCE ON ALL SIDES AND 6' OF CLEARANCE ON TOP.

DO NOT ALTER HEATER. KEEP HEATER ITS ORIGINAL STATE.

NEVER ATTACH DUCT WORK TO FRONT OR REAR OF HEATER.

INSTALLATION:

WARNING! TEST ALL GAS PIPING AND CONNECTIONS FOR LEAKS AFTER INSTALLATION. NEVER USE AN OPEN FLAME TO CHECK FOR LEAKS. APPLY A MIXTURE OF LIQUID SOAP AND WATER TO ALL JOINTS. BUBBLES FORMING SHOW A LEAK THAT MUST BE CORRECTED.

1. CONNECT FITTING ON HOSE/REGULATOR ASSEMBLY TO PROPANE TANK(S). TURN FITTING COUNTERCLOCKWISE INTO THREADS ON TANK. TIGHTEN FIRMLY USING A 7/8" WRENCH. IT IS IMPORTANT TO POSITION REGULATOR SO THAT THE HOSE LEAVING THE REGULATOR IS IN A HORIZONTAL POSITION. THIS PLACES THE REGULATOR VENT IN THE PROPER POSITION TO PROTECT IT FROM THE WEATHER.
2. OPEN PROPANE SUPPLY VALVE ON PROPANE TANK(S) SLOWLY.
3. CHECK ALL CONNECTIONS FOR LEAKS.
4. CLOSE PROPANE SUPPLY VALVE.

OPERATION:

1. PLUG POWER CORD OF HEATER INTO A THREE-PRONG, GROUNDED EXTENSION CORD.
2. PLUG EXTENSION CORD INTO A 120 VOLT/60 HERTZ, 3-HOLE, GROUNDED OUTLET. MOTOR WILL START, FAN WILL TURN, FORCING AIR OUT FRONT OF HEATER.

Need It. Rent It!

3. OPEN PROPANE SLOWLY. IF NOT OPENED SLOWLY, EXCESS-FLOW CHECK VALVE ON PROPANE TANK WILL STOP GAS FLOW. IF THIS HAPPENS, CLOSE PROPANE SUPPLY VALVE AND OPEN AGAIN SLOWLY.

4. PUSH IN AND HOLD AUTOMATIC CONTROL VALVE BUTTON. (MAKE SURE MOTOR AND FAN ARE RUNNING) YOU MAY HAVE TO PUSH PIEZO IGNITOR BUTTON 3-8 TIMES BEFORE THE BURNER LIGHTS. WHEN BURNER LIGHTS KEEP AUTOMATIC CONTROL VALVE BUTTON PUSHED IN. RELEASE AFTER 30 SECONDS.

NOTE: IF HEATER FAILS TO IGNITE, HOSE MAY HAVE AIR IN IT. IF SO, KEEP AUTOMATIC CONTROL VALVE BUTTON PRESSED AND WAIT 20 SECONDS. RELEASE AUTOMATIC CONTROL VALVE AND WAIT 20 SECONDS FOR UNBURNED FUEL TO EXIT HEATER.

NOTE: IF HEATER IS UNPLUGGED OR POWER OUTAGE OCCURS WHILE HEATER IS RUNNING, THE THERMAL LIMIT DEVICE WILL STOP FUEL FLOW. A FEW SECONDS OCCUR BEFORE THERMAL LIMIT DEVICE ACTIVATES. DURING THIS SHORT TIME, FLAMES MAY APPEAR OUTSIDE HEATER. THIS IS NORMAL. THE FLAMES WILL GO OUT WHEN THE THERMAL LIMIT DEVICE ACTIVATES.

TO STOP HEATER:

1. TIGHTLY CLOSE PROPANE SUPPLY VALVE ON PROPANE TANK(S)
2. WAIT A FEW SECONDS. HEATER WILL BURN GAS LEFT IN SUPPLY HOSE.
3. UNPLUG HEATER.

Need It. Rent It!