

# Hejny Rentals, Inc.

Contractor, Lawn & Garden, and Party Equipment Rentals  
1829 White Bear Ave. - Maplewood, MN 55109  
**Phone: 651-770-3841 – Fax: 651-770-1725**  
**[www.hejnyrental.com](http://www.hejnyrental.com)**

**\*\*DINGO AND ANY ATTACHMENTS NEED TO BE BROUGHT BACK CLEAN-100\$ MINIMUM CLEANING CHARGE\*\***

## **Safety rules for Kubota SCL 1000**

Know the equipment and the worksite before you operate.

Remember: safe operation begins with the operator.

### **Before Operating**

Failure to follow warnings or instructions can cause serious injury or death.

The Operation and Maintenance Manual and machine signs (decals) provide proper operation and maintenance instructions.

Check for leaks, broken or damaged parts before operating.

Never smoke when fueling!

Know the location and function of all safety features and inter-locks, gauges and operating controls.

Activate the auxiliary hydraulics control lever for hydraulic attachment operation.

Wear proper clothing and use personal protection equipment as required for the job.

Make sure all controls are in NEUTRAL before starting the engine.

Always drive up the ramp with the heavy end UPHILL

Secure loader and attachments using tie-downs and chains.

Use towing vehicle and trailer of adequate capacity.

### **RENT IT SAFELY**

The attachment signs (decals) and Operation and Maintenance Manual provide operating and maintenance instructions. Failure to follow warnings and instructions can cause serious injury or death.

### **Know the Worksite**

- Understand and comply with applicable laws and regulations.
- Call local utilities before you dig: 1-888-258-0808. Know the location of underground gas, water and electrical lines.
- Inspect work area for holes, drop-offs or unstable ground.
- Know the weight limitations of operating surfaces and clearances.

### **Changing and Using Attachments**

Make sure attachment is securely fastened to loader. Bob-Tach™ levers should be fully down and locked with wedges extended through attachment mounting holes. Use only approved attachments.

### **Leaving the Machine**

Before leaving the operator's position:

- 1 Lower lift arms and put attachment flat on the ground.
- 2 Put all controls in NEUTRAL.
- 3 Engage the parking brake.
- 4 Stop the engine.
- 5 Remove the key to prevent unauthorized starting.

### **While Operating**

1. Start Mini Track Loader with steering lever controls and hydraulic controls in neutral. Keep bystanders away.
2. Check the function of the Reverse Stop Panel. When the panel is pressed, the steering levers are forced back to NEUTRAL.
3. Move steering lever controls smoothly. The drive system is responsive and loader will move
4. immediately when controls are activated. Do not pull back suddenly on the steering lever controls to stoploader.
5. Slow down when approaching the dump site.
6. Load, unload and turn on flat, level ground. Do not travel or turn with lift arms up.
7. **CARRY THE LOAD LOW.**
8. Keep bystanders away from Mini Track Loader and work area. Do not raise the lift arms and attachment over another worker.
9. Never exceed loader's Rated Operating Capacity (ROC).
10. Use the correct size bucket for the type and density of material being handled.
11. Always look in the direction of travel.
12. Never carry riders or use loader as a manlift.
13. Keep bystanders away from the work area.
14. On slopes, keep heavy end of loader uphill.

## Need It. Rent It!

15. Travel directly up and down slopes, not across them.
16. Never drive over obstructions or drop-offs.
17. Operate only from the operator's position at the rear of the loader. Always keep your hands on the controls. Stay away from the tracks.
18. Keep the bucket level when raising lift arms to prevent material from falling out of bucket.

Need It. Rent It!

# Hejny Rentals, Inc.

Contractor, Lawn & Garden, and Party Equipment Rentals  
1829 White Bear Ave. - Maplewood, MN 55109  
Phone: 651-770-3841 – Fax: 651-770-1725  
[www.hejnyrental.com](http://www.hejnyrental.com)

## STOP!

1. Carry the load low!
2. On slopes, keep heavy end of loader uphill!
3. If the machine tips over, DO NOT RESTART without first calling Hejny Rental. Engine may be damaged if engine is restarted after tipping.
4. There will be a Minimum Service Charge of \$300 to recover the loader. This DOES NOT include tipping the loader back upright.

**If engine is restarted after machine is tipped without first calling Hejny Rental, customer assumes responsibility for repairs or replacement.**

**Signature** \_\_\_\_\_ **Date** \_\_\_\_\_

Need It. Rent It!