

Hejny Rentals, Inc.

Contractor, Lawn & Garden, and Party Equipment Rentals
1829 White Bear Ave. - Maplewood, MN 55109
Phone: 651-770-3841 – Fax: 651-770-1725
www.hejnyrental.com

GAS WATER PUMPS

PUMP PLACEMENT

PLACE THE PUMP AS NEAR TO AVAILABLE WATER SOURCE AS PRACTICAL. BE SURE PUMP IS STABLE. IT IS WELL TO REMEMBER PRIMING TIME IS INCREASED AND AMOUNT OF DISCHARGE DECREASED AS THE PUMP IS RAISED HIGHER ABOVE THE **WATER SOURCE**.

HOSE CONNECTION

1. CONNECT HOSES AT INLET AND OUTLET SIDES. BE SURE ALL CLAMPS ARE TIGHTENED, BEFORE PLACING PUMP INTO OPERATION.
2. THE STRAINER MUST BE IN PLACE BEFORE STARTING PUMP. DAMAGE TO PUMP WILL RESULT IF LARGE DEBRIS ENTERS THE CASING.
3. WHEN CONNECTING HOSES CHECK COUPLING AND RUBBER PACKING. THE COUPLING MUST BE FULLY TIGHTENED AND PACKING IN PROPER POSITION THE PUMP ACCORDING TO THE ABOVE INSTRUCTIONS IN ORDER FOR THE PUMP TO OPERATE CORRECTLY. AIR ENTERING PAST A LOOSE COUPLING OR MISPLACED PACKING WILL PREVENT WATER INTAKE.

PRIMING THE PUMP

REMOVE FILTER PLUG AND ADD WATER UNTIL PUMP CASING IS FILLED. STARTING PUMP WITHOUT WATER IN CASING COULD RESULT IN MECHANICAL SEAL DAMAGE.

Need It. Rent It!