

Hejny Rentals, Inc.

Contractor, Lawn & Garden, and Party Equipment Rentals
1829 White Bear Ave. - Maplewood, MN 55109
Phone: 651-770-3841 – Fax: 651-770-1725
www.hejnyrental.com

ELECTRIC STAPLERS

OPERATING INSTRUCTIONS

- GUARD AGAINST ELECTRIC SHOCK. PREVENT BODY CONTACT WITH GROUNDED SURFACES, FOR EXAMPLE, PIPES, RADIATORS, RANGES, REFRIGERATOR ENCLOSURES.
- KEEP CHILDREN AWAY. DO NOT LET VISITORS CONTACT TOOL OR EXTENSION CORD. ALL VISITORS SHOULD BE KEPT AWAY FROM WORK AREA.
- DON'T FORCE TOOL. IT WILL DO THE JOB BETTER AND SAFER AT THE RATE FOR WHICH IT WAS INTENDED.
- KEEP WORK AREA CLEAN. CLUTTERED AREAS INVITE INJURIES.
- DRESS PROPERLY. DO NOT WEAR LOOSE CLOTHING OR JEWELRY THEY CAN BE CAUGHT IN MOVING PARTS. RUBBER GLOVES AND NON-SKID FOOTWEAR ARE RECOMMENDED WHEN WORKING OUTDOORS.
- NEVER POINT THE TOOL TOWARD YOURSELF OR ANYONE ELSE, WHETHER IT CONTAINS FASTENERS OR NOT.
- USE ONLY FASTENERS WHICH ARE MANUFACTURED OR RECOMMENDED BY THE MFG CO.
- DO NOT ENGAGE IN HORSEPLAY-ALWAYS ASSUME THE TOOL CONTAINS FASTENERS.
- DON'T ABUSE CORD. NEVER CARRY TOOL BY CORD OR YANK IT TO DISCONNECT FROM RECEPTACLE. KEEP CORD FROM HEAT, OIL, AND SHARP EDGES.
- SECURE WORK. USE CLAMPS OR A VISE TO HOLD WORK. IT'S SAFER THAN USING YOUR HAND AND IT FREES BOTH HANDS TO OPERATE TOOL.
- DON'T OVERREACH. KEEP PROPER FOOTING AND BALANCE AT ALL TIMES. INSPECT TOOL CORDS PERIODICALLY AND IF DAMAGED, HAVE REPAIRED BY AUTHORIZED SERVICE FACILITY. INSPECT EXTENSION CORDS PERIODICALLY AND REPLACE IF DAMAGED. KEEP HANDLES DRY, CLEAN, AND FREE FROM OIL AND GREASE.
- STAY ALERT. WATCH WHAT YOU ARE DOING. USE COMMON SENSE. DO NOT OPERATE TOOL WHEN YOU ARE TIRED.
- DO NOT MODIFY THE PLUG PROVIDED IF IT WILL NOT FIT IN THE OUTLET; HAVE THE PROPER OUTLET INSTALLED BY A QUALIFIED ELECTRICIAN.

LOADING AND UNLOADING STAPLES

1. DISCONNECT THE TOOL FROM THE POWER SOURCE.
2. BE SURE THAT YOUR FINGER IS NOT ON THE TRIGGER.
3. HOLD THE TOOL SO THAT THE NOSE POINTS AWAY FROM YOU OR ANYONE ELSE.
4. WITH YOUR FREE HAND, PRESS ON THE REAR OF THE LATCH TO RELEASE THE MAGAZINE BASE ASSEMBLY. SLIDE THE MAGAZINE BASE TO THE REAR OF THE TOOL AS FAR AS IT WILL GO.
5. LOADING: PLACE STRIP OF STAPLES IN THE GUN SO THAT THE CROWN OF THE STAPLE IS FACING UP
6. PUSH THE MAGAZINE BASE ASSEMBLY FORWARD UNTIL THE LATCH ENGAGES AND LOCKS INTO PLACE.
7. CONNECT THE TOOL TO THE POWER SOURCE. HOLD THE TOOL WITH YOUR HAND AROUND THE HANDLE AND WITH YOUR INDEX FINGER BY THE TRIGGER. POSITION THE FRONT NOSE AT THE POINT WHERE THE STAPLE IS TO BE DRIVEN. HOLD THE TOOL TIGHT AGAINST THE MATERIAL TO BE STAPLED AND PULL THE TRIGGER.

JAMMING

DAMAGE TO PARTS AND/OR EXCESSIVE ACCUMULATION OF DIRT ARE THE PRINCIPLE CAUSES OF JAMS. IF A JAM SHOULD OCCUR, PROCEED AS FOLLOWS:

1. DISCONNECT THE TOOL FROM THE POWER SOURCE.
2. OPEN THE MAGAZINE AND REMOVE ALL FASTENERS. CHECK THE REAR OF THE NOSE FOR WEDGED FASTENERS AND REMOVE THEM.
3. CLEAN THE MAGAZINE, THE NOSE AND ALL ASSOCIATED PARTS.
4. IF THE TOOL CONTINUES TO JAM, HAVE IT SERVICED BY QUALIFIED SERVICE PERSONNEL.

Need It. Rent It!