

Hejny Rentals, Inc.

Contractor, Lawn & Garden, and Party Equipment Rentals
1829 White Bear Ave. - Maplewood, MN 55109
Phone: 651-770-3841 – Fax: 651-770-1725
www.hejnyrental.com

FLOOR STRIPPER

WHEEL ADJUSTMENT

The "angle of blade attack" is adjustable to accommodate removal of various types of floor coverings. To get the best cutting angle, on-the-job trial is best; however, in general, a steep blade angle is suggested for tougher jobs.

Other suggestions on wheel adjustments:

- use low settings for wood or particle board
- use medium settings for most jobs
- use higher settings for tough jobs on concrete floors
- dull blades don't cut-re-sharpen blades frequently

BLADE CHANGING

This is most easily done by elevating the front blade holder and placing a support under it to hold the weight during blade changing. An allen wrench comes with each Bearcat.

1. Always disconnect the electrical plug first!
2. New blades are extremely sharp - BE CAREFUL - wearing gloves is recommended.
3. Use only Crain Replacement Blades.
4. Larger blades (9" or 16") should be mounted in front of the screws, but clamped tightly.
5. New blades to be used on wood or particle board should be "slightly dulled" to prevent gouging.

OPERATION

Generally start out with a narrow blade and change to a wider blade as long as it cuts. Wider blades cut faster.

1. Use short, heavy-duty cords for maximum power. We recommend 12 or 14 gauge, 3 phase cords.
2. Pound down all nails to avoid blade damage.
3. Wide blades can be clamped "off center" in the blade holder for toe spaces.
4. For vinyl or resilient tile take-ups, a good starting place is doorways. Do not try to cut the entire blade's width. Try cutting 1" strips; then increase to 2", 3" or whatever comes-up easily, without digging or crawling on top.
5. Use blades "bevel up" for concrete floors and "bevel down" for wood floors.

Need It. Rent It!