

Hejny Rentals, Inc.

Contractor, Lawn & Garden, and Party Equipment Rentals
1829 White Bear Ave. - Maplewood, MN 55109
Phone: 651-770-3841 – Fax: 651-770-1725
www.hejnyrental.com

BARRETO HYDRAULIC TILLER

1. Familiarize yourself with the machine and its controls.
2. Do not leave tiller unattended with engine running.
3. The Operator Safety Clutch Lever is located on the left handlebar. The machine will not operate unless this lever is pressed up against the handle grip. When the lever is released, both wheels and the tines stop.
4. Never run the machine in reverse while the tines are rotating. Always move the Tine Control Lever to “OFF” before reversing the wheels.
5. Be sure the Tine Control Lever is set at “OFF” while loading and unloading the tiller and when moving to or from areas to be tilled.
6. Wheel Speed – The Wheel Speed is variable both in forward and reverse. Moving the Wheel Drive Lever to the right causes the tiller to go forward; to the left to back up. The farther the Speed Control Lever is moved away from center, the faster the tiller will travel. When the lever is centered, the wheels are locked in neutral or the park position.
7. Tine Control Lever – The tines operate at a constant speed. The Tine Drive Lever must be moved all the way over to the forward “ON” position when tilling. If an object becomes lodged in the tines, put the Wheel Drive Lever in neutral and reverse the tine direction to dislodge it.
8. Caution – Keep hands and feet clear of the tines at all times!
9. To prevent injuries from rotating tines, keep cover closed and machine level while tines are operating.
10. Operate the tiller on level ground only.
11. Tilling Operation – In most soil and sod conditions, the depth bar can be set with the pin in the 3rd hole from the top. When starting to till, move the Tine Drive Lever to the forward position. Hold the Operator Safety Clutch Lever to engage the tines. Move the Wheel Drive Lever to the right until desired wheel speed is reached.

Note: Under most conditions, at least 2 passes must be made. For deeper tillage, move the depth bar up one hole at a time.

Need It. Rent It!