

# Hejny Rentals, Inc.

Contractor, Lawn & Garden, and Party Equipment Rentals  
1829 White Bear Ave. - Maplewood, MN 55109  
Phone: 651-770-3841 – Fax: 651-770-1725  
[www.hejnyrental.com](http://www.hejnyrental.com)

## 15 GALLON WET VAC

**DANGER-** OPERATING A MACHINE THAT IS NOT COMPLETELY OR FULLY ASSEMBLED COULD RESULT IN INJURY OR PROPERTY DAMAGE. DO NOT OPERATE THIS MACHINE UNTIL IT IS COMPLETELY ASSEMBLED. INSPECT THE MACHINE CAREFULLY BEFORE OPERATIONS. USE ONLY AS DESCRIBED IN THIS PAGE. USE ONLY CLARKE'S RECOMMENDED ATTACHMENTS.

**DANGER-** USING A MACHINE WITH A DAMAGED POWER CORD COULD RESULT IN AN ELETROCUTION. DO NOT USE THE MACHINE IF THE POWER CORD IS DAMAGED. DO NOT USE THE ELECTTRICAL CORD TO MOVE THE MACHINE. KEEP CORD AWAY FROM HEATED SURFACES. DO NOT UNPLUG BY PULLING ON THE CORD; GRASP THE PLUG NOT THE CORD.

**WARNING-** OPERATING A MACHINE WITHOUT OBSERVING ALL LABELS, DECAL, ETC., COULD RESULT IN INJURY OR DAMAGE. READ ALL MACHINE LABELS BEFORE ATTEMPTING TO OPERATE THE MACHINE.

**WARNING-** ELECTRICAL COMPONENTS CAN "SHORT-OUT" IF EXPOSED TO WATER OR MOISTURE. KEEP THE ELECTRICAL COMPONENTS OF THE MACHINE DRY.

**WARNING-** USE OF THIS MACHINE TO MOVE OTHER OBJECTS OR TO CLIMB ON COULD RESULT IN INJURY TO THE OPERATOR OR DAMAGE TO THE MACHINE. DO NOT USE THIS MACHINE AS A STEP OR FURNITURE. DO NOT ALLOW IT TO BE USED AS A TOY. CLOSE ATTENTION IS NECESSARY WHEN USED BY OR NEAR CHILDREN.

**WARNING-** MOVING PARTS OF THIS MACHINE CAN CAUSE INJURY AND/OR DAMAGE. KEEP HANDS, FEET, LOOSE CLOTHING, HAIR, FINGERS, ALL PARTS OF THE BODY AWAY FROM OPENINGS AND MOVING PARTS.

**WARNING-** ELECTROCUTION COULD OCCUR IF YOU HANDLE THE PLUG OR APPLIANCE WITH WET HANDS. DO NOT HANDLE PLUG OR APPLIANCE WITH WET HANDS.

**WARNING-** INJURY TO THE OPERATOR AND/OR DAMAGE TO THE MACHINE COULD OCCUR WHEN CLEANING ON STAIRS, UNLESS EXTRA CAUTION IS USED.

**WARNING-** TO PREVENT POSSIBLE ELECTICAL SHOCK, ALWAYS USE A 3-WIRE ELECTRICAL SYSTEM CONNECTED TO THE ELECTRICAL GROUND.

THIS MACHINE MUST BE CONNECTED TO THE ELECTRICAL GROUND TO PROTECT THE OPERATOR FROM SHOCK. THE MACHINE HAS AN APPROVED POWER CORD WITH THREE CONDUCTORS AND A PLUG WITH THREE TERMINALS. CONNECT THE PLUG TO A RECEPTACLE THAT HAS THREE HOLES AND IS CONNECTED TO THE ELECTRICAL GROUND. THE GREEN (OR GREEN AND YELLOW) CONDUCTOR IN THE CORD IS THE GROUND WIRE. NEVER CONNECT THIS WIRE TO ANY TERMINAL OTHER THEN THE GROUND TERMINAL. THIS MACHINE USES A 120 VOLT AC 60 CYCLE ELECTRICAL CIRCUIT. MAKE SURE YOU HAVE THE CORRECT FREQUENCY AND VOLTAGE BEFORE CONNECTING THE POWER CORD TO AN OUTLET. MAKE SURE THERE IS A GROUND PIN ON THE PLUG. DO NOT USE AN ADAPTOR.

**WARNING-** TO PREVENT POSSIBLE ELECTRIC SHOCK, ALWAYS USE A 3-WIRE ELECTRICAL SYSTEM CONNECTED TO THE ELECTRICAL GROUND.

**WARNING-** DO NOT CUT, REMOVE OR BREAK THE GROUND PIN. IF THE OUTLET DOES NOT FIT THE PLUG, CONSULT YOU ELECTRICAL CONTRACTOR.

## Need It. Rent It!