

# Hejny Rentals, Inc.

Contractor, Lawn & Garden, and Party Equipment Rentals  
1829 White Bear Ave. - Maplewood, MN 55109  
Phone: 651-770-3841 – Fax: 651-770-1725  
[www.hejnyrental.com](http://www.hejnyrental.com)

## **PRESSURE WASHER (GAS OR ELECTRIC)**

### **SAFETY**

- DO - Read all instructions before operating.
- DO - Wear proper face protection when operating a pressure washer.
- DO - Keep hands and feet clear of the cleaning nozzle at all times.
- DO - Set the trigger safety lock when the gunvalve is not in use.
- DO - Use only the nozzle size designed for your model.
- DO - Relieve the pressure in the system before uncoupling hoses.
- DO - Let the machine run for several minutes before starting to pressure wash.
- DON'T - Point the gun at yourself or another person.
- DON'T - Fill the fuel tank when the engine is running or hot.
- DON'T - Start the machine until water is turned on at the faucet and water is flowing from the end of the extension.
- DON'T - Use on unsupported elevated surfaces such as ladders.
- DON'T - Try to repair a hose leak while the system is under pressure.
- DON'T - Tamper with the unloader valve adjustment or alter engine speed.
- DON'T - Aim spray at windows or glass doors.

### **HOSE CONNECTIONS**

1. Connect discharge hose to machine outlet.
2. Connect gun valve to discharge hose with quick coupler.
3. Connect water supply hose to machine. Use a 3/4" I.D. garden hose.

### **WAND TIPS**

- White -> Green -> Yellow -> Red (in order of least pressure to most pressure)
1. Make sure spray wand tip (mounted on base of pressure washer for storage) is firmly connected.

### **GAS ENGINE (IF APPLICABLE) BEFORE STARTING MACHINE**

1. Do not operate gasoline engine in enclosed areas.
2. Locate machine on level ground.
3. Turn on water supply.
4. Pull gun valve trigger, allowing air in system to escape. When water flows in a full steady stream, release gun valve trigger.

### **STARTING AND RUNNING MACHINE**

1. Check position of fuel valve, and if closed, open valve.
2. Close choke on carburetor by moving lever in proper direction. If engine is warm, keep choke fully open.
3. Recoil start. Pull the starter grip lightly until resistance is felt, then pull briskly.
4. If engine is cold, open choke gradually after engine starts.
5. Warm up engine for 3 minutes without load (gun valve closed) before pressure washing.

### **PRESSURE WASHING**

1. Select the cleaning nozzle best suited for the cleaning job.
2. Lock gun valve trigger.
3. Connect cleaning nozzle to gun valve extension quick coupler. Push coupler sleeve into locked position to prevent accidental loss of nozzle.
4. Unlock gun valve trigger.
5. Machine is now ready for operation.

**Need It. Rent It!**

### **STOPPING THE MACHINE**

1. Allow machine to run for 1 minute with gun valve closed to cool before stopping.
2. Operate "STOP" lever or switch to shut off machine.
3. Close fuel valve. Failure to close fuel valve can cause fuel leakage when machine is transported.
4. Lock the gun valve trigger.
5. Hoses may now be disconnected from the machine. **WARNING** - Failure to release pressure before disconnecting the hose quick coupler can result in the quick coupler o-ring seal blowing out.

### **ELECTRIC MOTOR (IF APPLICABLE)**

1. Electric Washer requires 14.3 amps.
2. **Electric Washer includes 30' extension cord and CANNOT be used with additional extension cords!**
3. Turn on water supply.
4. Turn on motor.

**Need It. Rent It!**