

Hejny Rentals, Inc.

Contractor, Lawn & Garden, and Party Equipment Rentals
1829 White Bear Ave. - Maplewood, MN 55109
Phone: 651-770-3841 – Fax: 651-770-1725
www.hejnyrental.com

Hot Pressure Washer

Hot Water Shotgun 3040

SAFETY

1. Fluids under high pressure spray can be nearly invisible, and can penetrate the skin and cause extremely serious injury. If any fluid appears to penetrate the skin call the National Poison Control Network at (412) 681-6669.
2. Do not overfill the fuel tank! If fuel spillage does occur, do not light the burner or start the engine before cleaning up spilled fuel.
3. Always shut down the machine and cool the engine before adding fuel.
4. Never use your hands to stop or detect leaks.
5. Always wear full face protection, protective clothing (including gloves and rubber boots) when operating the machine.
6. Never let the pump or burner run without the water supply flowing through the unit.
7. Never let the unit run for more than 5 minutes with the gun in the closed position.
8. Never allow children or any unauthorized persons to operate the machine.
9. Never leave the machine unattended. Always lock trigger when the machine is not in use.
10. Always make sure there is enough ventilation in area where machine is used.
11. Always chock one wheel.
12. Do not operate machine where combustible fumes or dust may be present.
13. Never attempt to wash the machine using the machine. It is water protected but not water proof.
14. Never attempt to alter or modify this equipment. Leave all guards in place!
15. Always shut down the machine and trigger the gunvalve to relieve the pressure before changing tips.
16. Do not use the hose if cuts, leaks, abrasions, bulges or coupling damage is evident.
17. Do not use the hose if any reinforcement is exposed. Never leave the discharge hose lying on the ground when machine is not in use.

OPERATION

1. Turn on water supply.
2. Trigger valve open until water flows freely and air is removed from the entire system. Then release and lock the gunvalve trigger.
3. Turn engine fuel supply valve to "ON."
4. If necessary move the choke lever to the "CLOSED" position.
(Choke may not be needed if engine is warm or temperature is high.)
5. Position machine on a level surface.
6. Turn ignition key to start and pull start.
7. After machine starts it will immediately begin to pump water.
8. Allow machine to warm up, and let cold water pump through the machine for 3 to 5 minutes to flush out system.
9. Before attaching any nozzle, make sure the gunvalve trigger is locked.
10. Connect the nozzle to the quick coupler.
11. Unlock gunvalve safety trigger lock.
12. After the pump has developed constant cold pressure, turn burner ON/OFF switch to the "ON" position.
13. Finish cleaning in the "RINSE" mode.
14. Turn the burner to the "OFF" position.
15. Let the machine run to discharge water until the heating coil has cooled for 3 to 5 minutes.
16. Turn motor ON/OFF switch to "OFF."
17. Trigger the gun to relieve system pressure and then lock the gunvalve trigger.
18. Remove the nozzle from the gunvalve extension quick coupler.
19. Shut off water supply.
20. Wrap up the discharge hose.

CUSTOMER IS RESPONSIBLE IF MACHINE FREEZES KEEP UNIT ABOVE 32 DEGREES FROZEN COILS BREAK AND COST \$700.00 TO REPLACE! NEVER USE DETERGENTS THAT ARE NOT COMPATIBLE WITH THE DISCHARGE HOSE! ALWAYS USE IN A PROPERLY VENTED AREA! DO NOT ATTEMPT ANY REPAIRS ON THIS MACHINE!!

Need It. Rent It!